

B HOME ASSEMBLY INSTRUCTIONS FOR

B1088-CHR CHESSER

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staple used in packing.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and eMciently.

PART LIST

NO:	SKETCH	DESCRIPTION	Q'TY
Α		Media Chest	1 Pc
В	V	Anti-tip restraint	1 Set

Note: Tipping hardware are attached to back panel

