ASSEMBLY INSTRUCTIONS

ITEM CODE: COLOURS DINING CHAIR

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all part is complete, before you assemble. Place all wooden furniture part on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS:

- Do not FULLY-TIGHTEN the nut or nut bolt until all nut or bolt is ready assembled.
 Do not OVER-TIGHTEN the nut or nut bolt to avoid causing
- Do not OVER-TIGHTEN the nut or nut bolt to avoid causing damages to the thread.
 Keen all hardware part out of reach of children
- 3. Keep all hardware part out of reach of children.

	4	ω	2	1	ITEM	
	BACK LEG L & R	FRONT LEG	CUSHION SEAT	CHAIR BACK	DESCRIPTION	PART LIST
	2 PCS	2 PCS	1 PC	1 PC	QTY	
Е	D	С	В	Α	ITEM	
ALLEN KEY M4 (BALL SHAPE)LONG	D FLAT WASHER 1/4"	SPRING WASHER 1/4"	JCBC SCREW M6 x 40MM (NYLOK)	JCBC SCREW M6 x 50MM (NYLOK)	QTY ITEM DESCRIPTION	HARDWARE LIST
	0	(T
1 PC	12 PCS	12 PCS	2 PCS	10 PCS	QTY	

