










ASSEMBLY INSTRUCTIONS

MODEL : HUNTER DINING CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts. Which may have come loose inside the carton during shipment. Identify and count all parts and compare with the hardware list as below :

Hardware List	No.	Picture	Description	Dimension	Qty
	①		JCBC M6	M6 x 40mm [Length]	2 Pcs
	②		JCBC M6	M6 x 60mm [Length]	4 Pcs
	③		JCBC M6	M6 x 90mm [Length]	4 Pcs
	④		Spring Washer M6	M6	10 Pcs
	⑤		Flat Washer M6	M6 x 19mm	10 Pcs
	⑥		Allen Wrench	M4	1 Pc
Parts List	No.	Description			Qty
	A	Back rest			1 Pc
	B	Seat			1 Pc
	C	Front Leg			2 Pcs

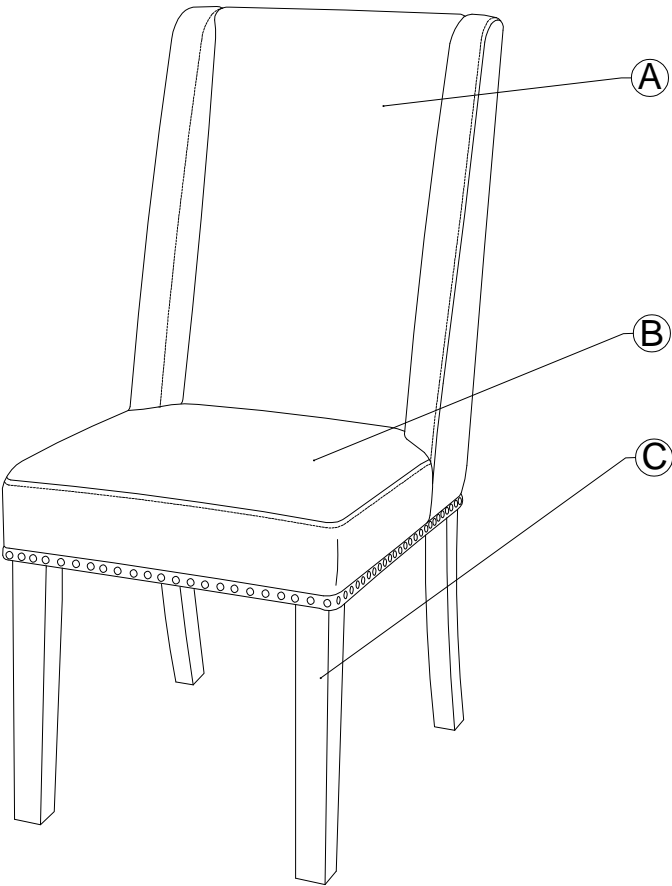


PARTS DETAILS

Assembly step


STEP 1

Assemble FRONT LEG to SEAT together as illustration shown.
DO NOT TIGHTEN THE SCREWS UNTIL FULLY SET UP.

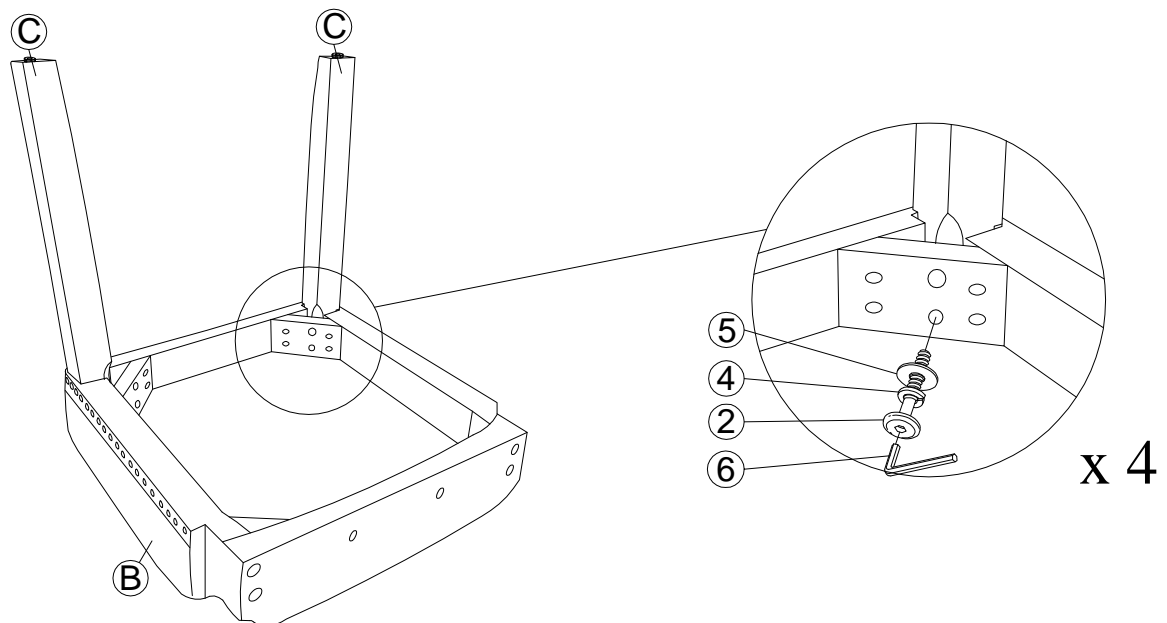

STEP 2

Assemble SEAT to BACKREST as illustration shown.
DO NOT TIGHTEN THE SCREWS UNTIL FULLY SET UP.

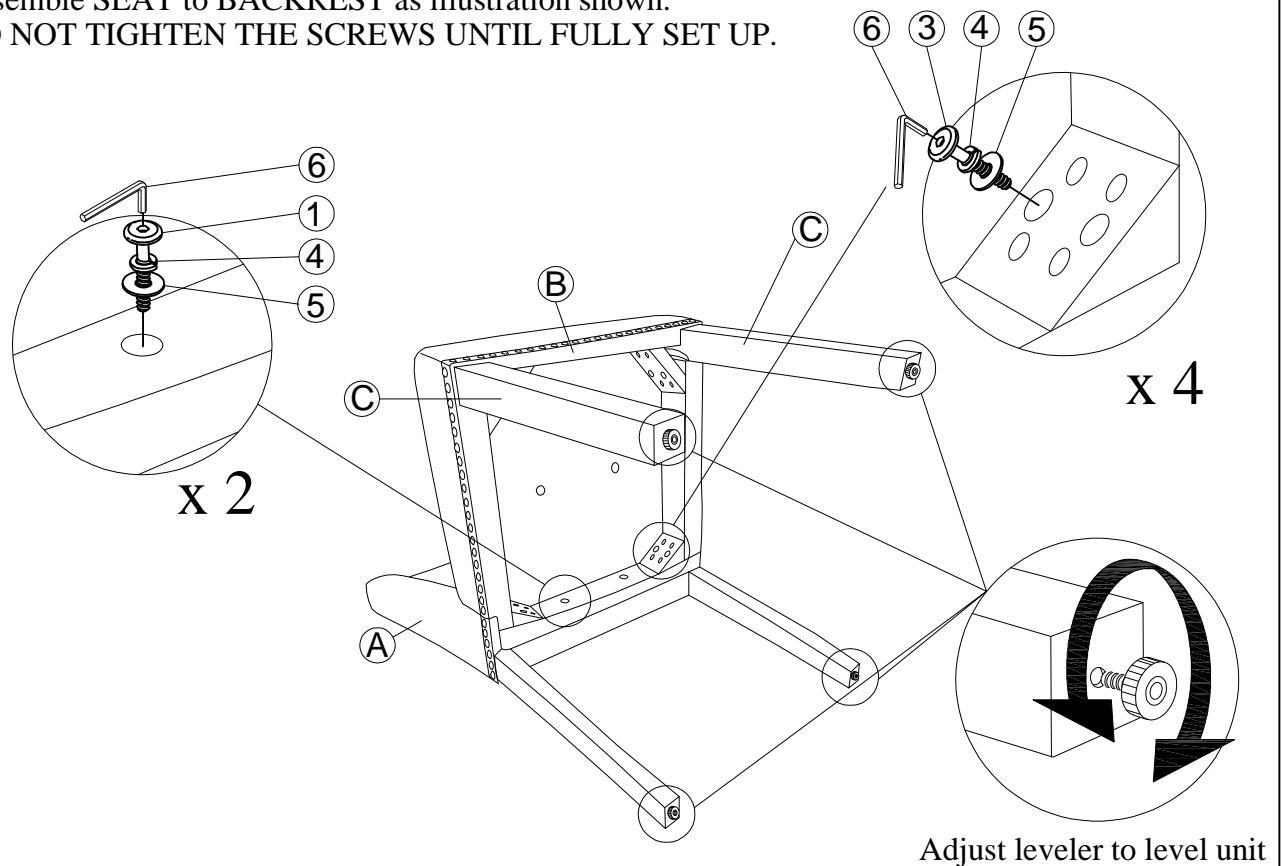

NOTE:

To ensure that chair is level, assemble the chair on flat & soft surface. DO NOT tighten all the screw & bolts until the chair been adjust & level all the legs so that they do not wobble. Once adjusted than only tighten all the screw using Allen Key while making sure that the unit remain level.