

 
 



ASSEMBLY INSTRUCTIONS


MODEL : F4021SS (3S)

Thank you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.

CAUTIONS :

1. Check contents against hardware list.
2. Familiarize yourself with the components and hardware by reviewing the Assembly Instructions.
3. Do not over tighten the screws and bolts as it may damage the threads.
4. Keep all hardware parts out of reach of children.
5. Please "LIFT UP & MOVE" the sofa whenever you want to shift it.


HARDWARE LIST			
NO.	DESCRIPTION		QTY
A	LEG		4 PCS
B	JCBB M8 x 50mm		8 PCS
C	FLAT WASHER		8 PCS
D	SUPPORT LEG		1 PC
E	M5 ALLEN KEY		1 PC

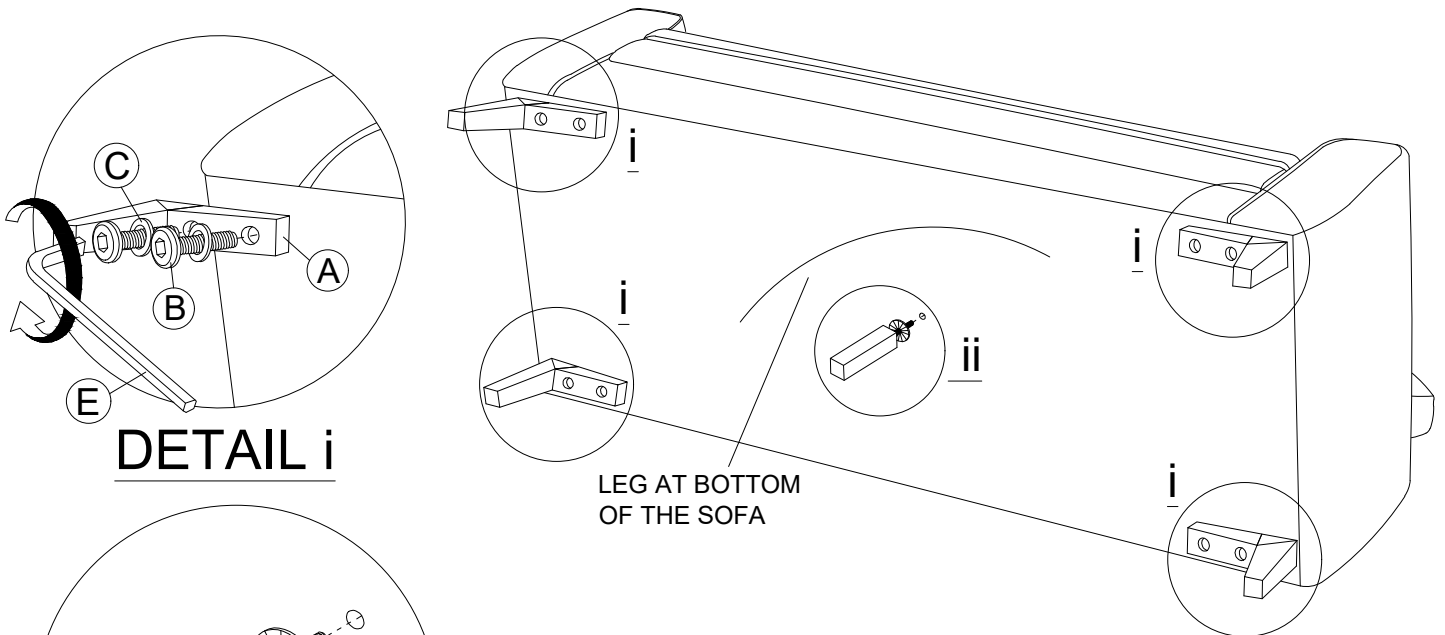

DETAIL i

LEG AT BOTTOM
OF THE SOFA

DETAIL ii

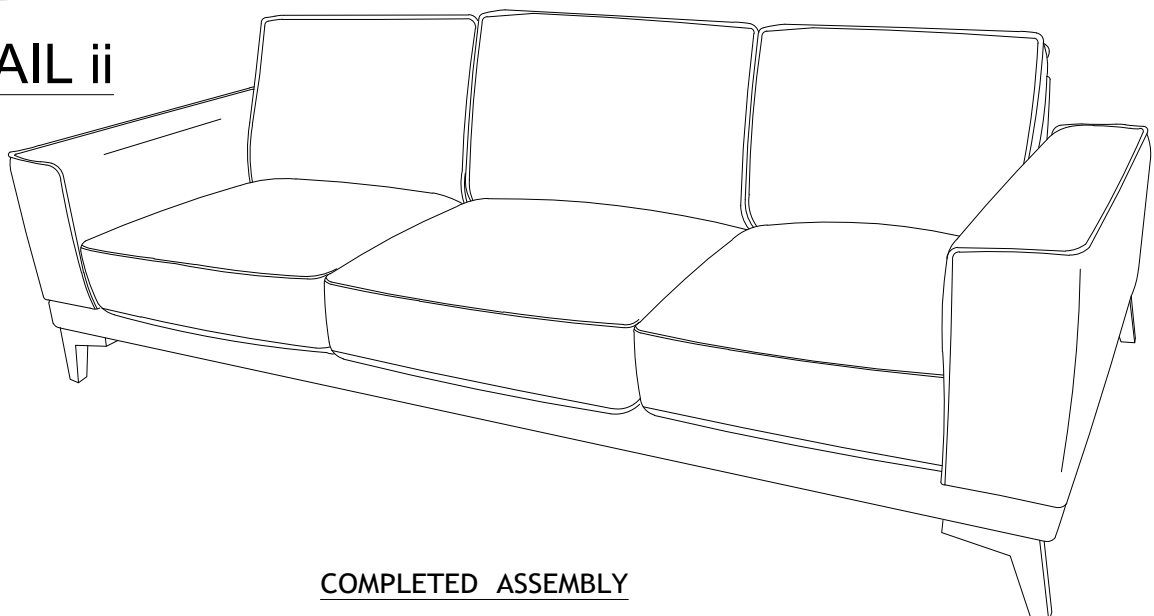

COMPLETED ASSEMBLY