






ASSEMBLY INSTRUCTION

BALBOA OTTOMAN

NO	Drawing	Qty	Description
A		4	Leg
H-1		16	Wooden Screws

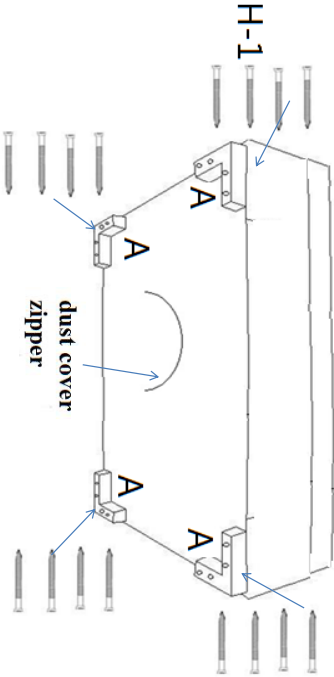

Step 1: Lay the sofa back on a non marring, padded surface. Unzip the dust cover compartment and retrieve the legs and hardware package. Zip up the dust cover once all items are retrieved.

Step 2: Install all four(A) legs with the H-1 wood screws provided.

Made In China