


NO	PART LIST	QTY.
1	BACKREST	2 PCS
2	FRONT LEG	4 PCS
3	CUSHION SEAT	2 PCS


NO	HARDWARE LIST	QTY.
A	JCBC M6 X 80MM	8 PCS
B	JCBC M6 X 50MM	10 PCS
C	M6 SPRING WASHER	18 PCS
D	M6 FLAT WASHER	18 PCS
E	ALLEN KEY M4	1 PC

PLEASE CHECK THAT YOU HAVE ALL THE PARTS LISTED BEFORE YOU START ASSEMBLING.
DO NOT TIGHTEN ALL SCREW UNTIL THE CHAIR IS FULLY SET-UP.


STEP 1

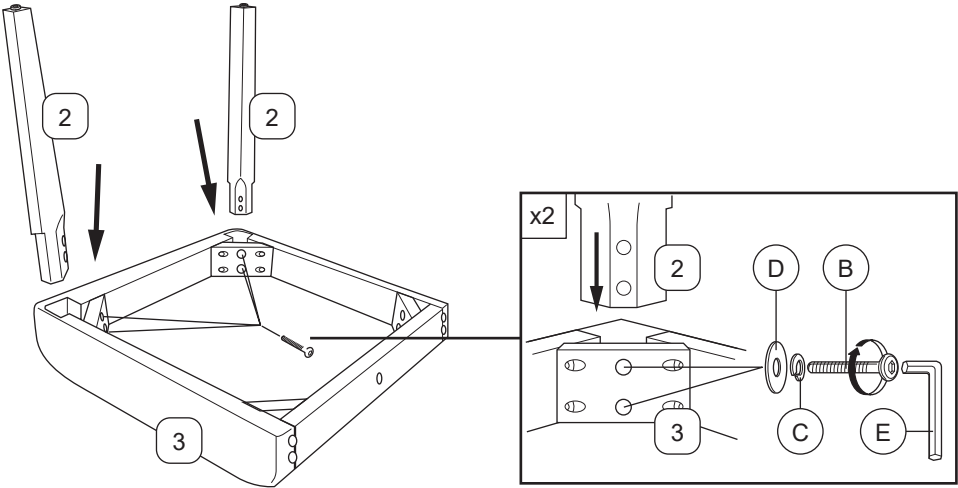

STEP 2

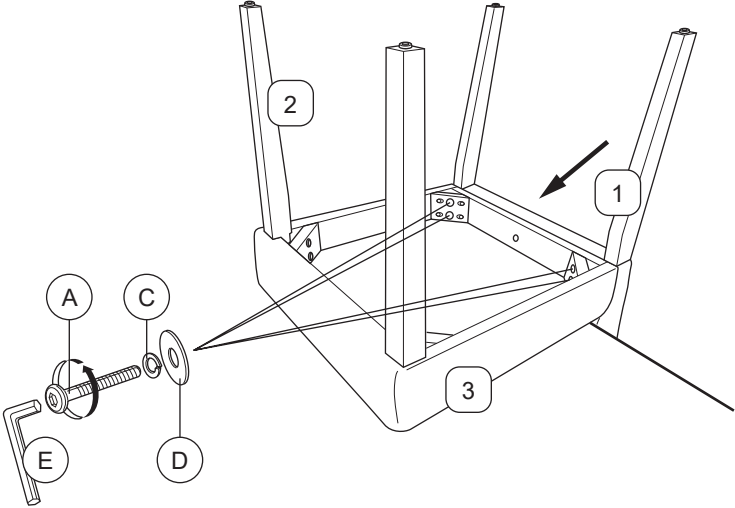

STEP 3

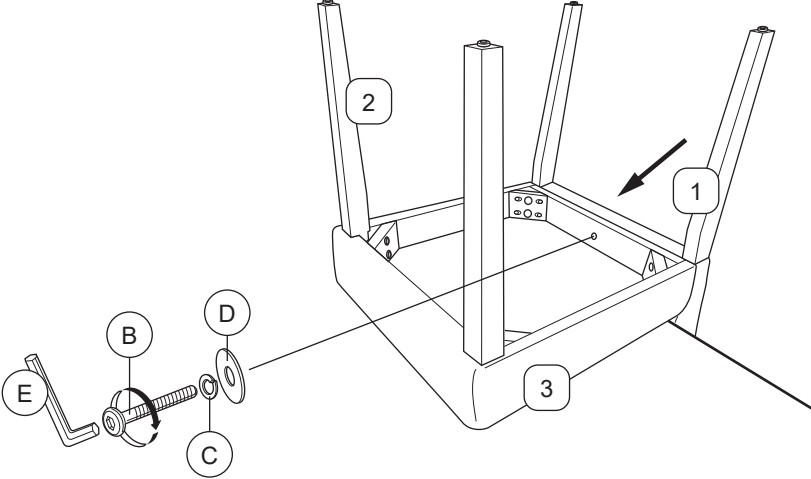

STEP 4

