
ASSEMBLY INSTRUCTIONS

ITEM #: 692- KHB 692- KFB 692- Q/KSR KING BED

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed


- staple tips can cause injury, therefore, for your protection, please remove any exposed staple used in packing.

 1. We recommend that you should assemble this product with the assistance of another person;
- this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. please do not over tighten screws or bolts.
- 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product

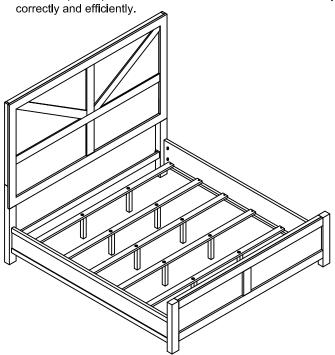

HARDWARE LISTS LISTA DE TORNILLO

DESCRIPTION		Q'TY
ALLEN BOLT (Ø5/16*38mmL)		2PCS
ALLEN BOLT (Ø5/16*60mmL)		6PCS
LOCK WASHER (Ø5/16)		8PCS
FLAT WASHER (Ø5/6)	0	8PCS
ALLEN KEY (4mm)		1PC
THREAD BOLT (5/16"*90mm)	(1	8PCS
Curved Washers (Ø9*30*15*8)	Ø	8PCS
HEX NUT (Ø5/16"*17mm)	©	8PCS
Open Wrench (13mm)	~	1PC
SCREW (Ø4*30mm)	<i>∳nnm</i> >	10PCS
	ALLEN BOLT (Ø5/16*38mmL) ALLEN BOLT (Ø5/16*60mmL) LOCK WASHER (Ø5/16) FLAT WASHER (Ø5/6) ALLEN KEY (4mm) THREAD BOLT (5/16"*90mm) Curved Washers (Ø9*30*15*8) HEX NUT (Ø5/16"*17mm) Open Wrench (13mm)	ALLEN BOLT (Ø5/16*38mmL) ALLEN BOLT (Ø5/16*60mmL) LOCK WASHER (Ø5/16) FLAT WASHER (Ø5/6) ALLEN KEY (4mm) THREAD BOLT (5/16"*90mm) Curved Washers (Ø9*30*15*8) HEX NUT (Ø5/16"*17mm) Open Wrench (13mm)

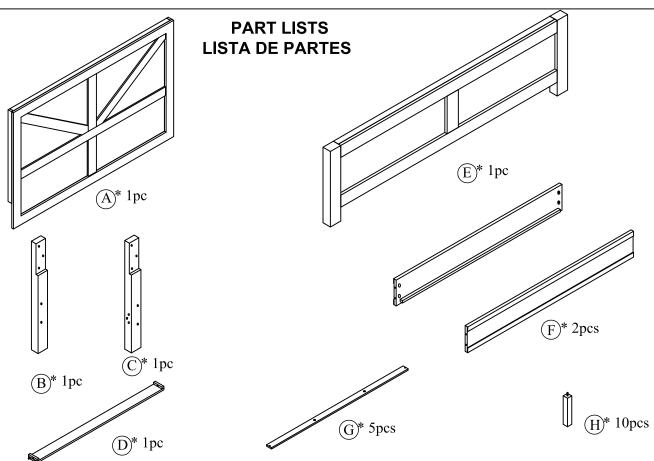

ASSEMBLY INSTRUCTIONS

ITEM #: 692- KHB 692- KFB 692- Q/KSR KING BED

