


NOTE: It would be useful to ask someone to help you at this stage.

Step 1: Attaching the KD Back:


Position the back of your recliner with the KD receivers positioned over the mechanism. Check to assure both sides of the mechanism are positioned inside of the KD receiver on the back frame, pushing in a downward motion from the top of the back frame until a clicking sound is heard as seen at below.

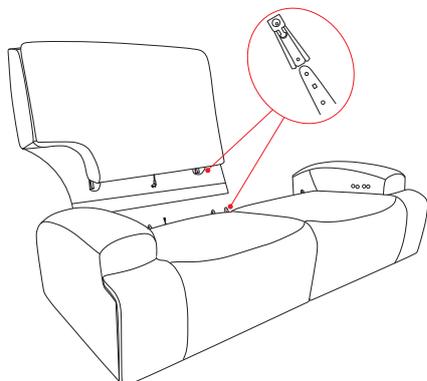

Step 2: Attach the lead wires:


Attach the lead wires from the bottom of the inside back to the lead wide located at the rear of the seat. Care is to be taken to make sure that no wires are in the path of the reclining mechanism. Make sure to close the clip lock to prevent the connection from coming loose.

Repeat the above processes to assemble the other back.

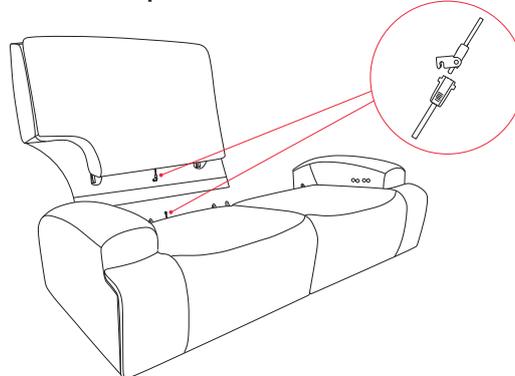


STEP 3: Close the Outside Back:

Using the preattached Velcro on the outside back flap align and press to the preattached velcro attached to the bottom of rear of the seat frame. Position your product in the area of its intended use before attaching the power supply

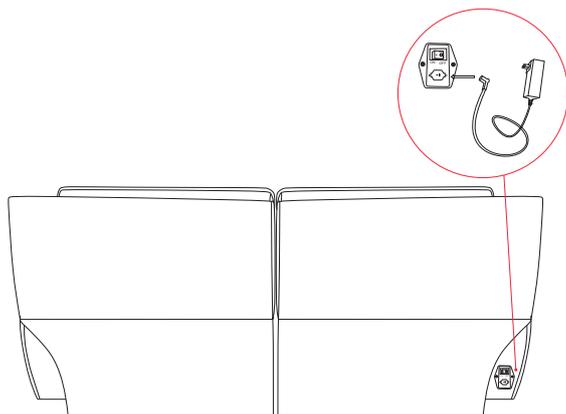


STEP 4

Connect the matching end of the power supply to the power switch at the bottom rear of the arm

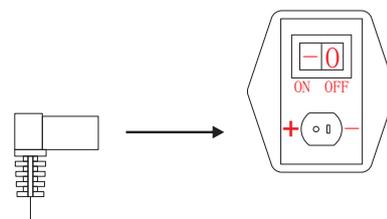


STEP 5

Connecting your power source: To prevent damage or injury, make sure to only plug the power supply into a grounded outlet. A green light should illuminate when your power source has power

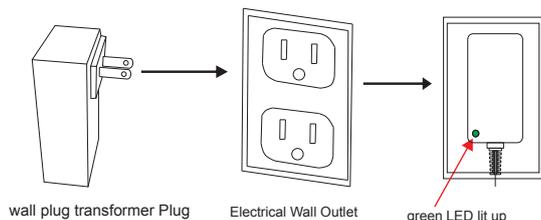


STEP 6

After all connections have been made, ensure that transformer power switch is switched to the "on" position.

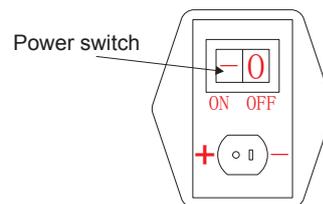

After assembly is complete, your product should look similar as seen below.

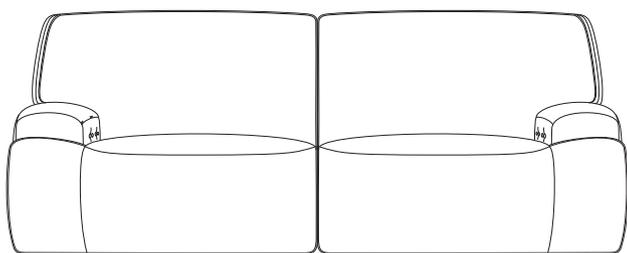

Care & Maintenance

Safety

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.