ASSEMBLY INSTRUCTIONS



С	В	A	No
Headboard Leg (L/R)	Footboard	Headboard	ITEM
2 pcs	1 pc	1 pc	Qty


BOX OF	(Box 2
SIDE RAI)
F	

Side Rail Side Rail 2 pc Slat With Stopper 2 pc Slat W/o Stopper 3 pc: Slat Support 4 pc Concealed Panel 4 pc	Н	G	F	Щ	D	oN
Oty 2 pc 2 pc 2 pc 3 pc: 4 pc	Concealed Panel	Slat Support	Slat W/o Stopper	Slat With Stopper	Side Rail	ITEM
	4 pcs	4 pcs	3 pcs	2 pcs	2 pcs	Qty


(Box 1) HARDWARE LIST


	I TEM	
No	HEM	Qty
1	ALLEN KEY m4x65mm Blk	1 pc
2	JCBC M6 x 30mm	6 pcs
3	SPRING WASHER 1/4" Rbw	6 pcs
4	Flat Washer 1/4"ID x 13mmOD Blk	6 pcs


RIGHT BACK VIEW ((((**3**X (5) LEFT

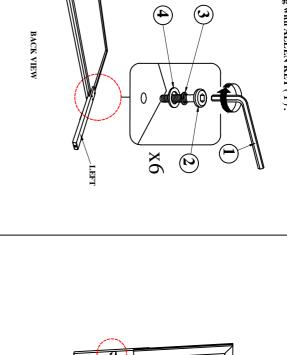

STEP 1: Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT(2) with Spring Washer (3), Flat washer (4) other end of rail to hook onto FOOTBOARD (B).

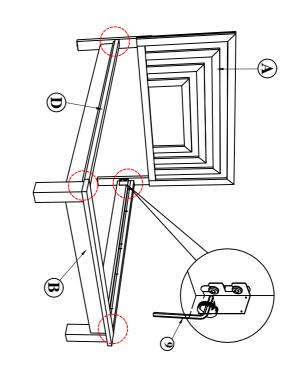



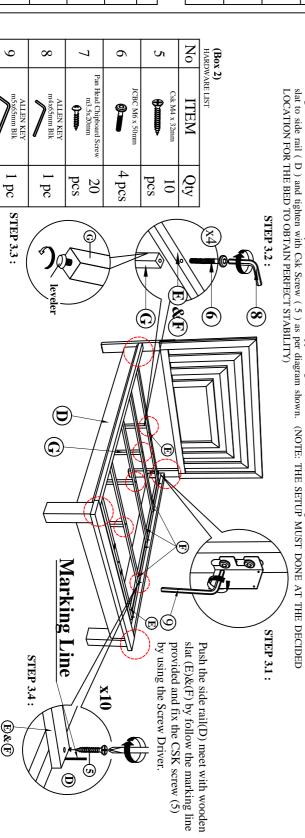

ASSEMBLY INSTRUCTIONS

