

# ASSEMBLY INSTRUCTIONS

**MODEL : 0268A  
DRESSER & MIRROR**

(Box 1)

BOX OF MIRROR


NO	ITEM	QTY
A	MIRROR	1 PC
B	MIRROR SUPPORT RAIL WITH ARROW MARKING	2 PCS

(Box 2)


BOX OF DRESSER

NO	ITEM	QTY
C	DRESSER	1 PC


STEP 1 : Draw out mirror support (B) from the carton box.

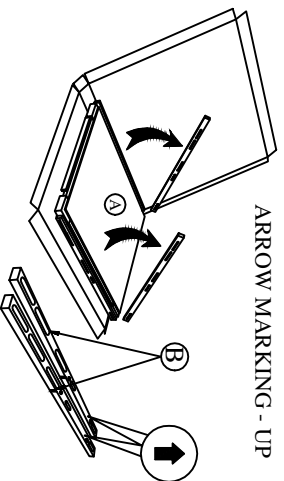

STEP 2 : Align & fasten mirror support (B) to the back of mirror (A) using short JCBC bolt (1), spring washer (3) & Flat washer (4). DO NOT FULLY TIGHTEN AT THIS STEP.  
Note : Make sure arrow marking of the mirror support (C) is aligned up.

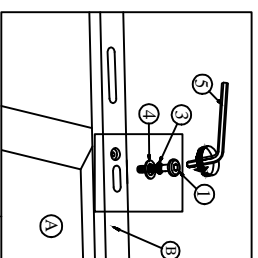


\*\*BACK VIEW

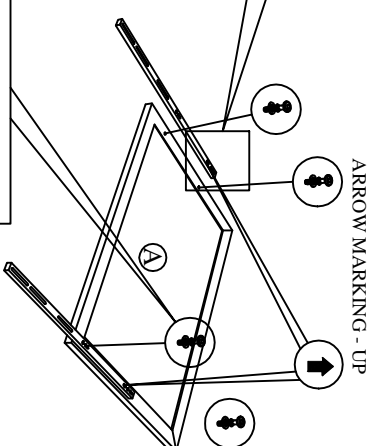


WARNING !  
USE SHORT BOLT M6 x 35mm

STEP 3 :

Place mirror (A) on top of dresser (C). Align & fasten mirror support (B) to the back of dresser (C) using long JCBC bolt (2), spring washer (3) & flat washer (4) THEN FULLY TIGHTEN ALL THE BOLTS AT STEP 2 & 3 WITH ALLEN KEY (5).

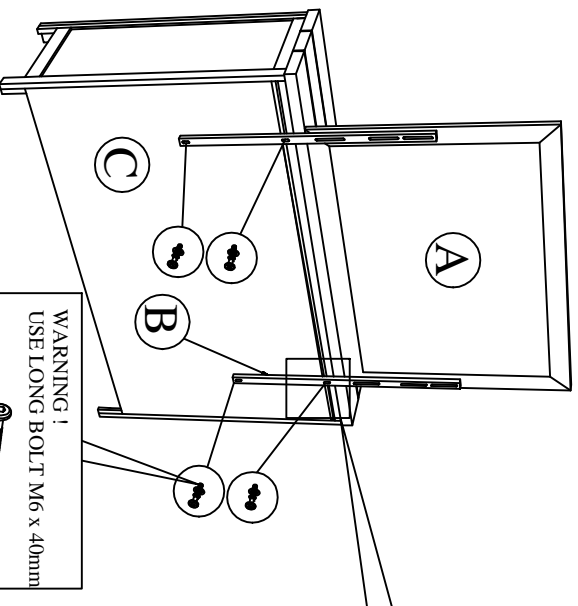


WARNING !  
USE LONG BOLT M6 x 40mm

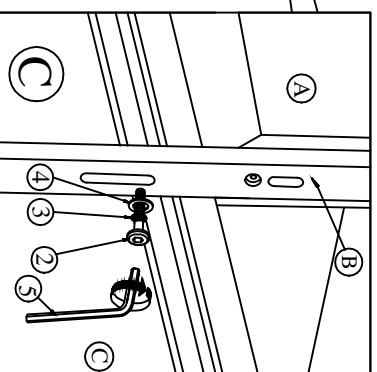

HARDWARE LIST

NO	ITEM	QTY
1	JCBC BOLT M6 x 35MM BLK	4 PCS
2	JCBC BOLT M6 x 40MM BLK	4 PCS
3	SPRING WASHER 1/4" RBW	8 PCS
4	FLAT WASHER 1/4" ID x 19mm OD BLK	8 PCS
5	ALLEN KEY m4 x 65mm BLK	1 PC

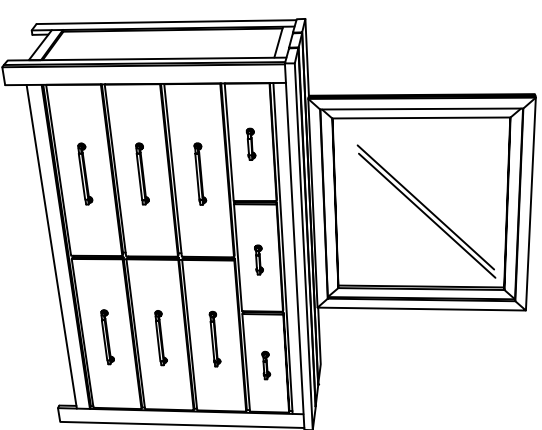

**COMPLETED  
ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.