
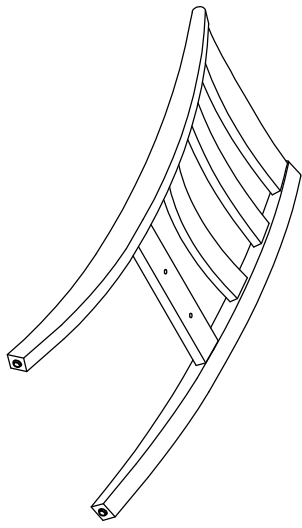

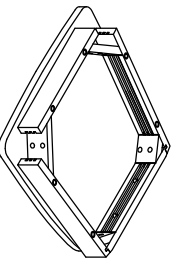

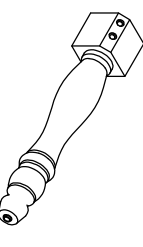





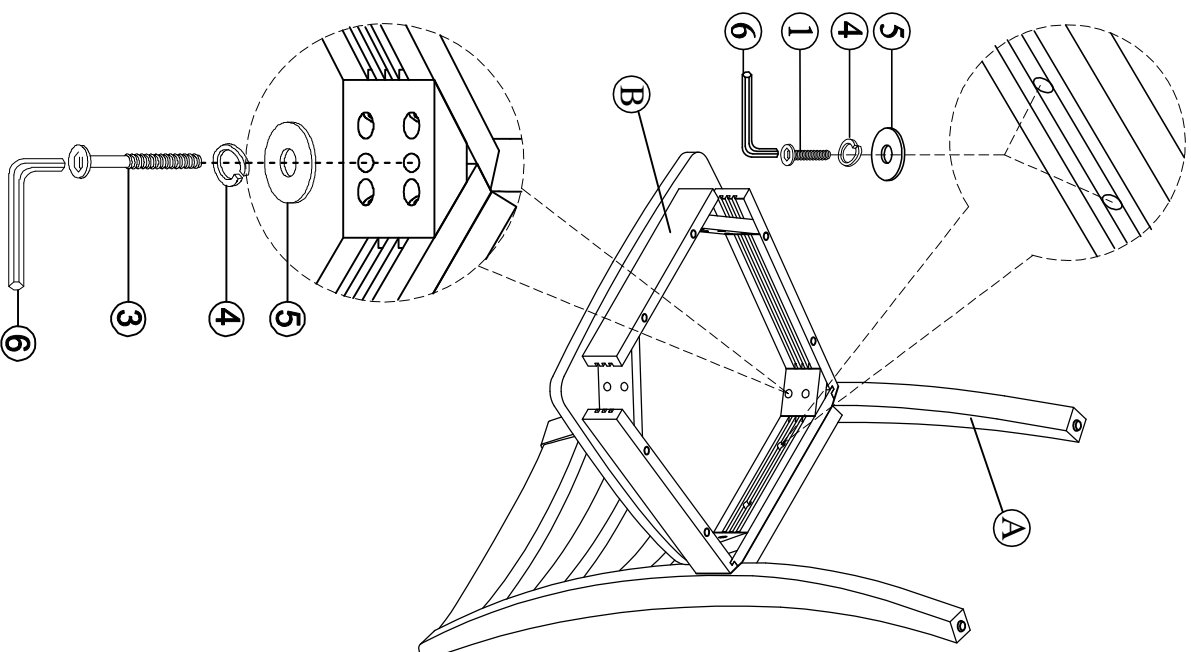
ASSEMBLY INSTRUCTIONS

Group Name: Monticello
 Description: Side Chair
 Item No: TN121-SC

PARTS LIST

<p>A Chair back</p> 	<p>1. Short bolt</p>  <p>1/4" x 40mm(2 pc)</p>	
<p>B Seat Frame</p>  <p>1 pc</p>	<p>2. Long bolt</p>  <p>1/4" x 60mm(4 pcs)</p>	
<p>C Front legs</p>  <p>1 pc</p>	<p>HARDWARE LIST</p>	
<p>3. Long bolt</p>  <p>1/4" x 75mm(4 pcs)</p>	<p>4. Spring washer</p>  <p>1/4" (10 pcs)</p>	
<p>5. Flat washer</p>  <p>1/4" x 19mm(10 pcs)</p>	<p>6. Allen key</p>  <p>4mm(1 pc)</p>	

Step. 1



Step. 2

