
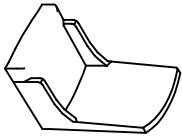











ASSEMBLY INSTRUCTIONS

Group Name: Mulberry
 Description: Parson Chair
 Item No: TN120-PC


LIST OF PARTS

(A) Seat Frame	(B) Front Legs
	
(C) Back Legs	(D) Side stretcher
	
1 L, 1R	1 L, 1R
(E) Front stretcher	(F) Back stretcher
	
1pc	1pc


LIST OF HARDWARE

1. Flat Washer	2. Spring Washer
	
1/4" x 19mm(8pcs)	1/4" (8pcs)
3. Short bolt	4. Screws
	
1/4" x 60mm(8pcs)	#4 x 38mm(8 pcs)
5. Allen key	
	
M4 (1pc)	

Step.1

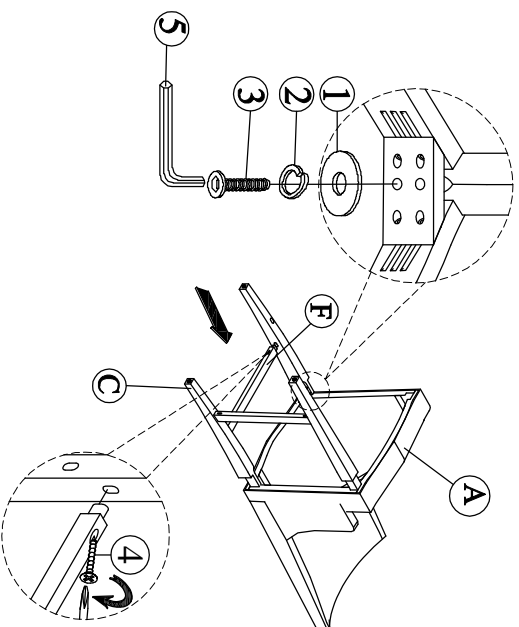

Step.2

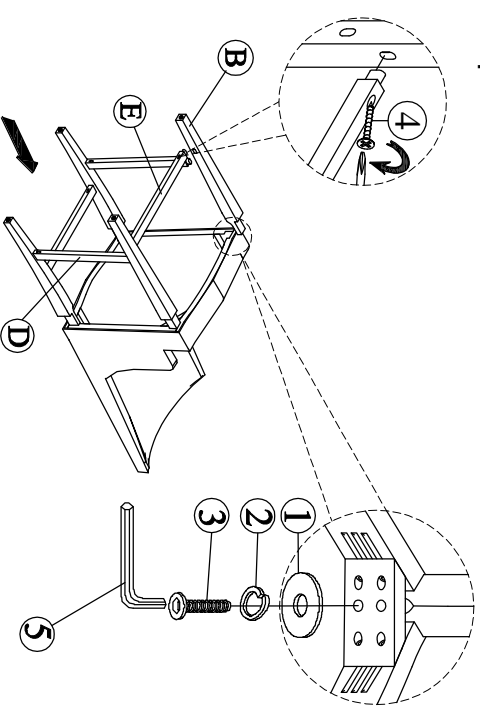

Step.3

