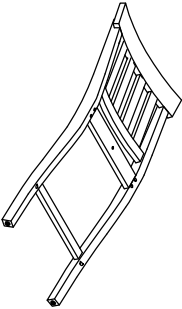
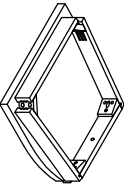











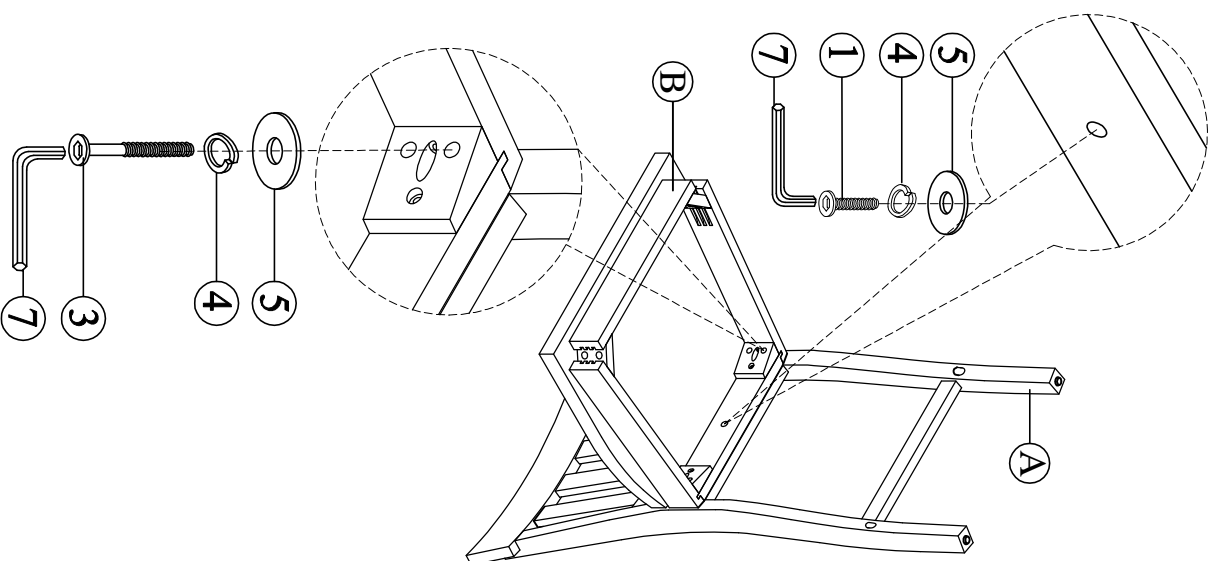
# ASSEMBLY INSTRUCTIONS

Group Name: Mulberry  
 Description: Side chair  
 Item No: TN120-SC

## LIST OF PARTS

<b>A Chair back</b>  1 pc	<b>B Seat Frame</b>  1pc	<b>C Front legs</b>  1L; 1R
<b>D Front stretcher</b>  1pc	<b>E Side stretcher</b>  1L; 1R	<b>HARDWARE LIST</b>
<b>1 Short bolt</b>  1/4" x 35mm(1 pc)	<b>2 Long bolt</b>  1/4" x 60mm(4 pcs)	<b>3 Long bolt</b>  1/4" x 75mm(4 pcs)
<b>5 Flat washer</b>  1/4" x 19(9 pcs)	<b>6 Screws</b>  #4 x 38mm(6 pcs)	<b>7 Allen key</b>  4mm(1 pc)

### Step. 1



### Step. 2

