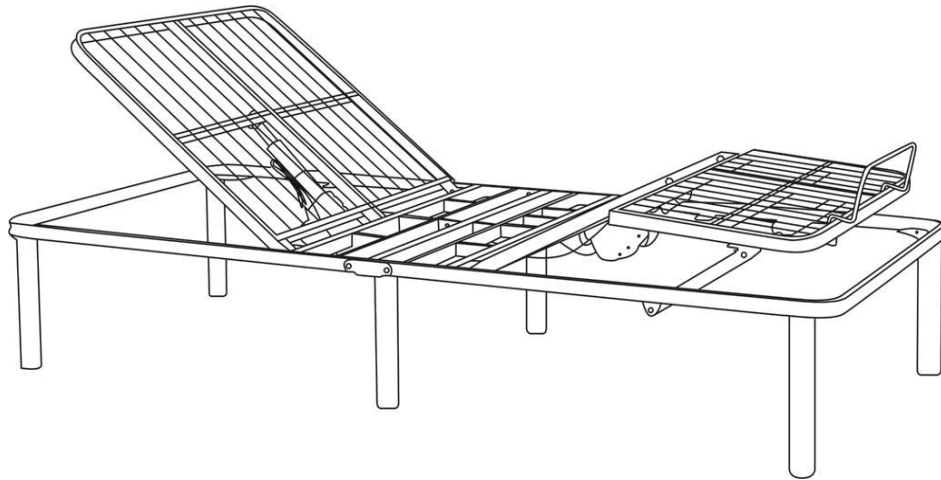




HZ2150 DM24

Adjustable Bed User Guide



Safety Precautions

Thank you for purchasing the Homezone adjustable bed.

Please read all directions before using the bed, and retain this guide for reference.

- Input voltage: AC 100-240V. 50/60HZ, output: DC29V 2.0A.
- Unplug the bed before cleaning it.
- Keep the product wire, power supply, and control box away from heat.
- Do not use the bed in a humid environment. The connector part of the wire and the gap between the motor and the control box cannot be exposed to liquid or high humidity.
- Never operate the bed if it has a damaged cord or plug, or is not working properly.
- Unplug the power cord and remove the remote control battery when the bed is not being used for a prolonged period of time.
- Consult your physician if you have any health questions regarding the use of this product.
- Do not let children play with or operate the bed..
- Do not allow children or pets underneath the bed.

Product Specifications:

Product Size:








Twin XL: 38" x 80" (96.5 x 203 cm)

Split Queen: 30" x 80" (76 x 203 cm)

Full: 54" x 75" (137 x 190.5 cm)

Queen: 60" x 80" (152 x 203 cm)

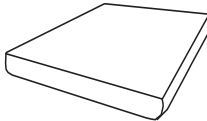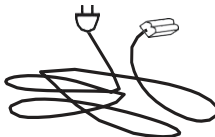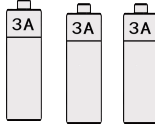Parts List

 Bed platform X 1 pcs	 Power Supply Box X 1pcs	 Legs X 6 pcs
 Remote controller X 1 pcs	 Power Cable X 1pcs	 AAA batteries X 2 pcs
 User Guide X 1 pcs		

Installation Guide

NOTE



Two people are required to assemble this adjustable base.



Open the carton in the flat position, bottom facing up to avoid damage.

STEP 1

Remove folded bed base from the box and carefully unfold the base. Set it on its side with the base half-way open.

Take caution to avoid pinning fingers or any underside wires along the hinge.



STEP 2

Open the accessories box and ensure all accessories are included

STEP 3

To install the four (4) legs, thread the bolt of the leg into the frame and tighten by hand.
Note: Total 6 pcs of legs. 2 pcs of legs have already been screwed on the base.



STEP 4

Uncoil the input power cord (connected to the control box on the underside of the base) and plug it into the power supply box.



a

STEP 5

With two (2) to four (4) people, lift the bed by the outer frame and turn it over so the mattress side is facing up. Take caution not to lift the bed by any moving parts, the retainer bar, or to use the legs as pivot points causing angled pressure as this may cause damage. Avoid dragging the base across the floor.



STEP 6

To complete assembly, plug the power cord into the wall outlet and use remote to test functionality.



STEP 7

Insert batteries into the remote control. Press the first circled button.

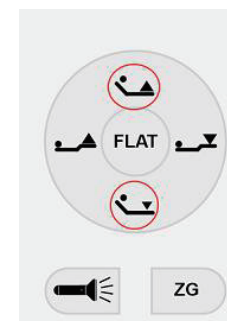
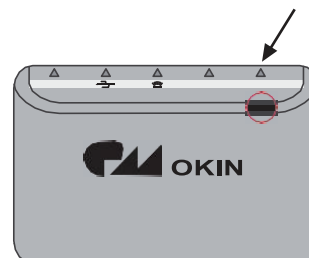
If the motor begins to run, unplug the power supply and turn the bed over to its upright position.

If the motor does not run, it needs to re-match its code.


Matching code:

1. Power on again or double click the control box pairing button, control box indicator light, control box enters into pairing mode.

2. Press and hold the buttons (circled in photo), the back light flashes, remote enters pairing mode, until back light stops flashing, and control box indicator light turns green, pairing is done.



Remote Control and Functions:

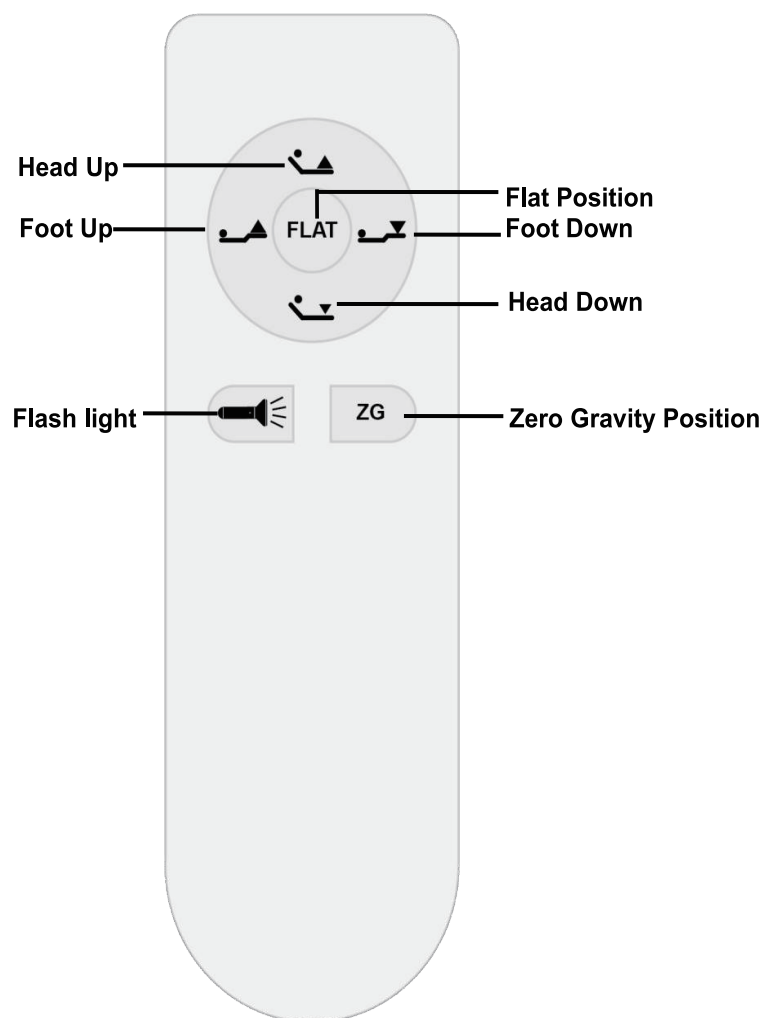

Button	Operation
	Press and hold to raise the backrest Let go when the desired position is reached
FLAT	Press Flat Button to flatten bed
	Press and hold to lower the backrest Let go when the desired position is reached
	Click to turn on/off the flashlight on back of the remote

Button	Operation
	Press and hold to raise the footrest Let go when the desired position is reached
	Press and hold the lower the foot Let go when the desired position is reached
ZG	Click to set a zero-gravity position

Troubleshooting:

If you experience problems with your adjustable bed, please follow these steps:

1. Press any button on the remote controller to see whether the blue backlight is bright. If it is dim or does not light, check the batteries. Replace batteries when necessary
 2. Check the green power indicator light on the power supply. If it is not lighted, check the power outlet.
 3. Check for loose wires and connectors.
 4. Check if the adjustable bed is assembled according to above steps.
- If your problems cannot be solved by above steps, please contact us.