




AB02

Adjustable Bed

User Guide

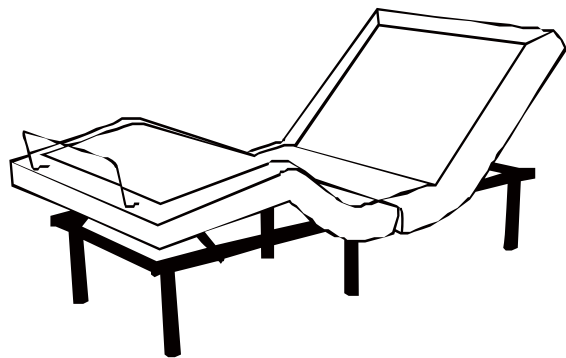

Safety Precautions

Thank you for purchasing the Levasleep zero-clearance adjustable bed.

Please read all directions before using the bed, and retain this guide for reference.

- Input voltage: AC 100-240V. 50/60HZ, output: DC29V 2.0A.
- Unplug the bed before cleaning it.
- Keep the product wire, power supply, and control box away from heat.
- Do not use the bed in a humid environment. The connector part of the wire and the gap between the motor and the control box cannot be exposed to liquid or high humidity.
- Never operate the bed if it has a damaged cord or plug, or is not working properly.
- Unplug the power cord and remove the remote control battery when the bed is not being used for a prolonged period of time.
- Consult your physician if you have any health questions regarding the use of this product.
- Do not let children play with or operate the bed..
- Do not allow children or pets underneath the bed.

Product Specifications:

Product Size:






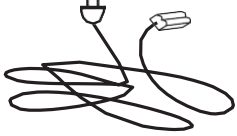
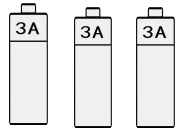

Twin XL: 38" x 80" (96.5 x 203 cm)

Split Queen: 30" x 80" (76 x 203 cm)

Full: 54" x 75" (137 x 190.5 cm)


Queen: 60" x 80" (152 x 203 cm)

Parts List

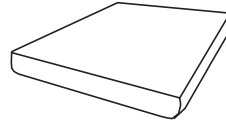
 Bed platform X 1 pcs	 Mattress rail X 1 pcs	 Legs X 6 pcs
 Remote controller X 1 pcs	 Power Supply Box X 1 pcs	 Power Cable X 1 pcs
 AAA batteries X 2 pcs	 User Guide X 1 pcs	

Assembly

1. Lay the carton flat on the floor and carefully cut it open.
2. Lift the carton so that the open side faces down and slide it up and off the bed. Place the bed upside-down flat on the floor.
3. Remove and discard the plastic bag. Put together the two pieces of the bed and align them flat on the floor.
4. Cut the zip ties, take out all the part boxes and the mattress rail, and check that you have all the necessary parts according to the parts list.
5. For leg assembly push the screw through the triangular brace. Screw in the leg and tighten, Leg height adjustments: 6.5"+3"+2"

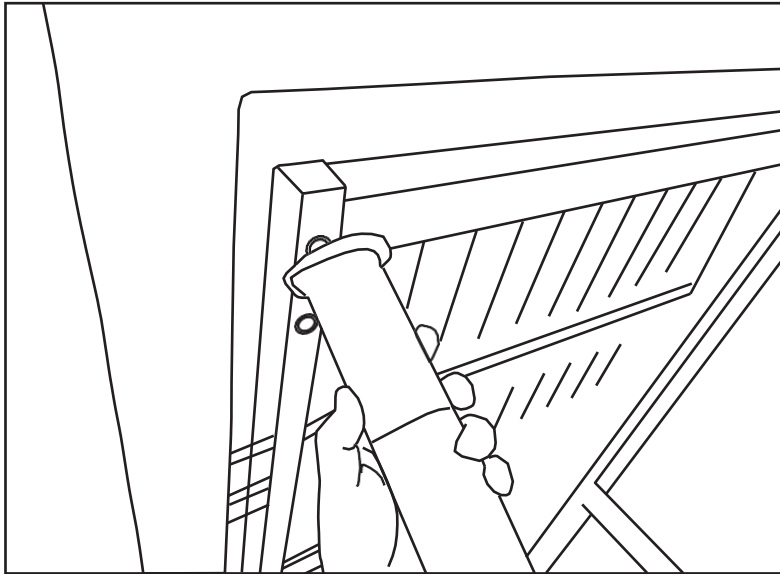


6. Connect the wire (on the bed) to the jack of power supply box
Connect the AC power cable to the other jack on the power supply box.
Connect the AC power cable to your nearby power outlet.


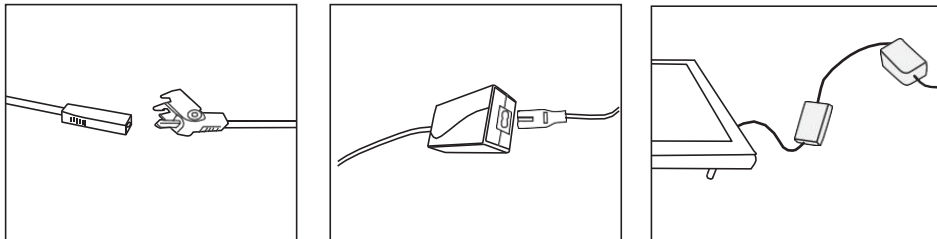


7. Insert batteries into the remote control. Press the first circled button.
If the motor begins to run, unplug the power supply and turn the bed over to its right side-up position.
If the motor does not run, it needs to re-match its code.
Matching code:


1. Power on again or double click the control box pairing button, control box indicator light turns blue, control box enters into pairing mode.
2. Press and hold the buttons (circled in photo), the back light flashes, remote control enters into pairing mode, until back light stops flashing, and control box indicator light turns green, pairing is done.

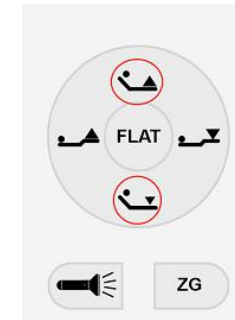


8. Insert the mattress rail at the foot of the bed. Then the bed is ready for use.

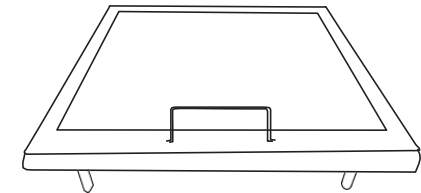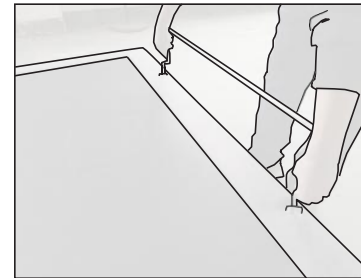


Remote Control and Functions:

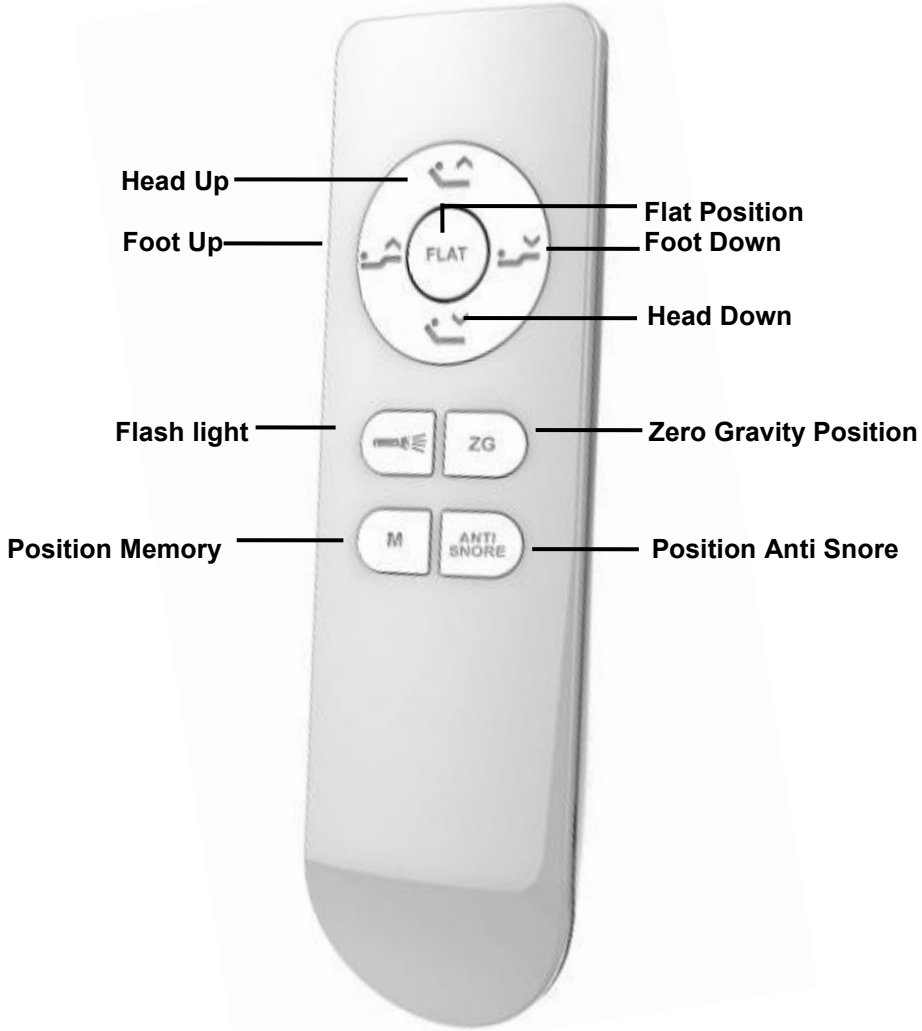


Button Operation

 Press and hold to raise the backrest
Let go when the desired position is reached


FLAT Press Flat Button to flatten bed


 Press and hold to lower the backrest
Let go when the desired position is reached

 Click to turn on/off the flashlight on back of the remote

ANTI SNORE Click to set a Anti-snore position

Button Operation

 Press and hold to raise the footrest
Let go when the desired position is reached

 Press and hold the lower the foot
Let go when the desired position is reached

ZG Click to set a zero-gravity position

M Click to set a user-defined position

Troubleshooting:

- If you experience problems with your adjustable bed, please follow these steps:
1. Press any button on the remote controller to see whether the blue backlight is bright. If it is dim or does not light, check the batteries. Replace batteries when necessary
 2. Check the green power indicator light on the power supply. If it is not lighted, check the power outlet.
 3. Check for loose wires and connectors.
 4. Check if the adjustable bed is assembled according to above steps.
- If your problems cannot be solved by above steps, please contact us.