



ANTI - TIPPING KIT

DRESSER

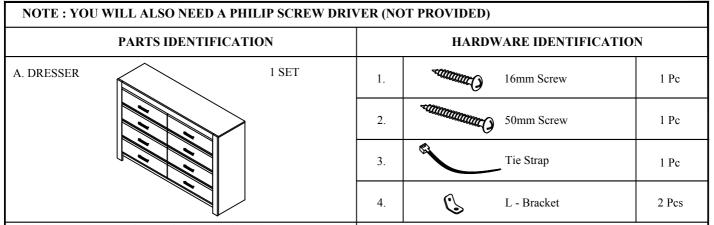


This tip restraint must be attached to a wall stud using 50mm screw enclosed.

Attach the bracket securely to the back top rail of the casegoods using 16mm screw provided, through the smaller hole.

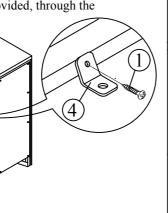

STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of casegoods. Attached to the wall stud using the 50mm screw provided, through the smaller hole.

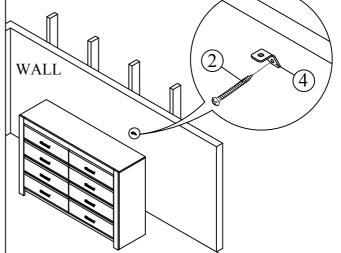

STEP 3

Place the casegoods into position so both mounting brackets are vertically in line. Pull the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Check that the strap is securely laced and locked.

